
MP/MPR 2-valve Manifold for Threaded Instruments

In the **MP** version, the instrument is screwed to a connector or coupling, which at the same time is fixed to the manifold body by means of bolts.

This allows mounting or dismounting the instrument without the need to turn it. On the other hand, in the **MPR** model, the instrument or manometer is threaded directly into the manifold body. In both cases, the kit includes a 3/8 "U" for 2" pipe mounting.

For direct mounting of the instrument in the pipe or process recipient, an integral VI5 valve can be employed (See V800 Manual Valves catalog).

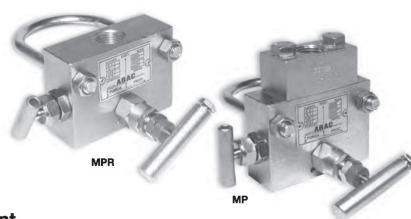

Mounting Measurement

